

Rinnai



Rinnai Cooling

Portable Air Conditioning Range



Wireless
Control



Temperature
Control



2 Year
Warranty



Timer for
Convenience



Multiple
Speed Fan



rinnai.com.au

Rinnai Portable Cooling

Australia's ever changing living spaces require flexible, efficient cooling solutions tailored to unique comfort needs. Rinnai Portable Air Conditioners have all the practical functions, including an intelligent sleep mode, inbuilt timer and self evaporative system - meaning comfort is maintained while keeping the bills down. The RPC35PDRWF model is unique in its category with reverse cycle heating and cooling.

Features and Benefits

- Sleep mode
- Water alarm
- Washable filter
- Adjustable temp control
- Wi-Fi and remote control
- 2 year warranty
- Inbuilt timer
- No need to empty water*
- Ventilation kit included



Specifications

		RPC26MCWF	RPC34MCWF	RPC41MCWF	RPC35PDRWF
Function		Cooling Only			Heating and Cooling
Control Method		Remote and Wi-Fi via App			
Rated Voltage/Frequency		220-240 Volts / 50Hz			
Rated Cooling Input Power	W	1000	1280	1640	1350
Cooling Capacity	kW	2.6	3.4	4.1	3.5
EER	W/W	2.6	2.6	2.5	2.59
Rated Heating Input Power	W	-	-	-	1045
Heating Capacity	kW	-	-	-	3.00
COP	W/W	-	-	-	2.87
Refrigerant Type		R290	R290	R290	R290
Refrigerant Volume	g	160	210	240	220
Sound Power Level	dB(A)	64	65	64	62.7
Product Dimension (H x W x D)	mm	710 x 415 x 345	710 x 476 x 385	802 x 493 x 415	765 x 467 x 397
Product Weight	kg	28.5	33	36.5	33.2
Ideal Application Area**	kg/h	Min 11-20	Min 12-24	Min 13-30	Min 12-24

How do Rinnai Portable Air Conditioners work?

- Air from the room is drawn into the air conditioner, cooled by refrigeration and blown out the front grill.
- Hot air is blown outside through the exhaust hose, using the window kit supplied with the air conditioner.
- Hot air must be exhausted outside the room being cooled, or you will not cool the room.

Which model is right for me?

It's important to choose model is right for you! The room conditions should be considered when selecting your Rinnai Portable Cooler. For best performance, the cooler should be in a well insulated and sealed ground floor room with external walls facing east and/or south.

For further information call **1300 555 545** or visit **rinnai.com.au**

* Climate conditions where high humidity is present may require drainage.

** Product must be operated in accordance with minimum room size requirements as detailed in the owners manual.